

Impact Sensor



GLOBAIOT
LOGISTIC OPERATIONS EXCELLENCE

What is Impact Warning?

Impact Warning device enhances site safety and operator accountability by raising awareness of an excessive impact.

The 3-Axis sensor is positioned on the vehicle's main chassis to monitor adverse acceleration/deceleration events, events above the programmed thresholds are logged. Output signals from the unit can be used to activate visual and acoustic warnings. Reset protection is incorporated whereby only authorised managers/supervisors can deactivate the alerts.


What's included:

- Impact sensor
- Diagnostic software
- Installation instructions
- Alert light/sounder, reset switch



Features:

- Voltage range: 8-60Vdc
- Management Reset Key
- Two configurable outputs
- Robust design, easy to install
- Environment protection: IP67, -10°C to +80°C
- 3-axis sensing with independent settings for X, Y, Z
- Programmable G-force and Duration-time thresholds
- Compatible with ICE and Battery powered forklifts and vehicles
- Optional post incident Creep Speed reduction (Sensor<>Vehicle or Sensor<>Speed Limiter)

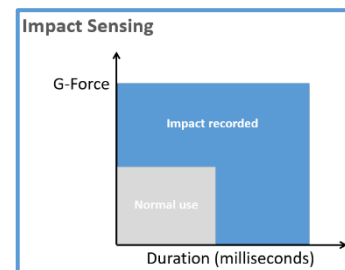

Benefits to you:

- Increased site safety
- Reduced damage costs
- Low-cost, easy to install solution

Email: sales@globaiotuae.com or Call +971508443641 for more information



GLOBAIOT
LOGISTIC OPERATIONS EXCELLENCE